

LIMITED WARRANTY ON AERO MIST, INC., PRODUCTS

AERO MIST, INC., as a manufacturer shall warrant manufactured misting components, excluding nozzles, to be free of defects in workmanship for one (1) year to the original purchaser, and each new fan or other product of its own manufacture, for a period of one (1) year, of shipment from the factory, to be free from defects in material and workmanship under normal use and service.

Neither this warranty nor any implied warranty apply to damage or harm caused by any or all of the following:

1. freight damage
2. damage from freezing, accident, fire, natural disaster, chemicals, improper installation, or unusual characteristics of water supply, such as mineral and calcium buildup.
3. damage caused by parts and/or accessories or components not obtained from or approved by AERO MIST, INC.
4. any consequential or incidental damages, other than injury to the person arising from the use of any fan or other product manufactured by AERO MIST, INC., except in states that do not allow the exclusion or limitation of incidental or consequential damage.
5. damage due to misapplication and/or misuse.
6. normal wear of moving parts or components affected by moving parts.
7. USE WITH FLAMMABLE MATERIALS IS ABSOLUTELY FORBIDDEN!

The liability of AERO MIST, INC., under the foregoing warranty is limited to the repair or replacement (at AERO MIST, INC.'s option) without charge for labor or materials of any parts upon return of the entire pump or other product or of the particular part to the AERO MIST, INC., factory within the warranty period, at the sole expense of the purchaser, which part shall upon examination appear to AERO MIST, INC.'s satisfaction to have been defective in material or workmanship.

AERO MIST, INC., expressly warrants its misting fans and other products as above stated. There are no other express warranties. Any implied warranties, including implied warranty of merchantability or of fitness for a particular purpose, are limited in duration to one year from the date of purchase by the original purchaser except in states that do not allow time limitations on implied warranties. There is no implied warranty of fitness for a particular purpose or merchantability when this product is put to an industrial, commercial or rental use.

No person including any dealer or representative of AERO MIST, INC., is authorized to make any representation or warranty concerning AERO MIST, INC., products on behalf of AERO MIST, INC., or to assume for AERO MIST, INC., the obligations contained in the warranty. AERO MIST, INC., reserves the right to install the same upon its existing products or products then in process or manufacture. This warranty gives you specific legal rights, and you may also have other rights, which vary, from state to state.

Aero Mist, Inc. 22832 N. 19th Ave Phoenix, AZ 85027

623-444-5121 www.aeromist.com

18" WALL MOUNTABLE AIR CIRCULATOR

MISTING FAN MODEL 67018-RING



Installation Instructions

Owners Manual



AEROMIST
.COM

ZK D/^d íô_ /E KKZIKhd KKZ D/^d/E'

Œ} D]•š íô_ u]•ŸvP (v]• š}š ooÇ v o}• U u]vš v v (Œ U
%o š oÇ • o Œ]vP•X h> v h> ŒŸ. Ÿ}v ~&]o • íđđóíô•
&hE d/KE^

d u%o Œ šµŒ }o]vPW šZ]v•š vš Ā %o}Œ] Ĩ Ÿ}v }(.v Ā š C
) (o š vš Z š v Z] Ā • Œ %o] }o]vPX

vĀ]Œ}vu vš Zµu](Ç]vPW Zµu]šÇ }všŒ}oo]vP Z o%o• Œ
µv }u(}Œš o vĀ]Œ}vu vš o }v]Ÿ}v•X

PŒ] µošµŒ v Z}ŒŸ µošµŒ W] o (}Œ }o]vP v Zµu]

WW>/ d/KE^

W Ÿ}•U Œ •š µŒ vš•U %o ÇPŒ}µv •U P Œ v•U (]Œ•U }µš }
PŒ vZ}µ• }o]vPU Ā vš•U (Œu•U Z}ŒŸ µošµŒ U (š}ŒÇ

^W /&/ d/KE^W

h> ñíó ŒŸ.

K^, %o%oŒ}Ā Pµ Œ X

íñ s}oš íí LX }Œ

u%o•W íXíííXíííXđí

t ©•W ííííđđííóí

í ^%o D}š}Œ ZWDW đđđíííđđííññ

W Œ(}Œu v W ííííđđñíííđ &D

/E^d >> d/

WŒ}%o Œ]v•š oo Ÿ}v }(Ç}µŒ v
D}µvŸvP }oš• (}Œ Ā oo u}µvš

íX /v•š oo %oµP]vš} '& /

íX © Z u o %oš Œ š} u]•

íX vš Œ u]•š Œ]vP }v šZ

đX /v•š oo ííô_ K šµ]vš}

ñX /v•š oo Z}• %oš Œ }v }
ĀŒ v Z •U }v š} Z}o šZ

òX ^ Œ Ā šZ o]µu .oš Œ

óX © Z šZ Z}• %oš Œ š

ôX (}Œ]v• ŒŸvP v}ííó • Œ

 
õX /v• Œš v}ííó • Z v ŸPZš

D /Ed E E

íX Z %o o]µu]vZ] }š}Œ

îX o v v}ííó • • Œ <µ}Œ >

ïX Z u}Ā Ā š Œ (Œ}u o]v •



/š u /	/š u
òóííô	íô_ E]v K•]oo
óñííđí	D]•š Z]vP ~đ•
ñíđíđW	Xííí vŸ Œ]%
ñíñíđ	D o %oš Œ í
ñòđíí	EÇo}v dµ]vP
ñíđíđí	,)• %oš Œííó
ñíñíñ	o]µu /vZ]]š
ííííò	ò_ •] %o d] hs
ñòíóñ	s]vÇo } š o
ñíòíí	^ Œ Ā
ñíòíí	W o •Ÿ v Z}Œ