



## Warranty and Statement

Advanced Misting Systems, warrants to its customers that Advanced Misting Systems products, excluding nozzles, to be free of defects in materials and workmanship for a period of (1) year from the date of purchase to the original purchaser. With customers proof of receipt Advanced Misting Systems will fix or replace the defective part or parts. Advanced Misting Systems reserves the right to inspect the defective part or parts prior to replacement. Advanced Misting Systems will not be responsible for consequential or incidental cost or damage caused by the product failure. Advanced Misting Systems, liability under this warranty is limited solely to the replacement or repair of defective parts.

Neither this warrant nor any implied warranty applies to damage or harm caused by any or all of the following:

1. Freight damage
2. Damage cause from freezing, fire, natural disaster, improper installation, chemicals, unusual characteristics of water supply.
3. Damage caused by parts and/or accessories or components not obtained from or approved by Advanced Misting Systems.
4. Damage due to misapplication and/or misuse.
5. Normal wear of moving parts or components affected by moving parts
6. Use with Flammable Materials is Forbidden.

The liability of Advanced Misting Systems, under the foregoing warranty is limited to the repair or replacement (at Advanced Misting Systems option) without charge for labor or materials of any parts upon re-turn of the entire pump or other product or of the particular part to the Advanced Misting Systems, factory within the warranty period, at the sole expense of the purchaser, which part shall upon examination appear to Advanced Misting Systems satisfaction to have been defective in material or workmanship.

Advanced Misting Systems, expressly warrants its pumps and other products as above stated. There are no other express warranties. Any implied warranties, including implied warranty of merchantability or of fitness for a particular purpose, are limited in duration to one year from the date of purchase by the original purchaser except in states that do not allow time limitations on implied warranties. There is no implied warranty of fitness for a particular purpose or merchantability when this product is put to an industrial, commercial or rental use.

No person including any dealer or representative of Advanced Misting Systems, is authorized to make any representation or warranty concerning Advanced Misting Systems, products on behalf of Advanced Misting Systems, or to assume for Advanced Misting Systems, INC., the obligations contained in the warranty. Advanced Misting Systems,

### California Proposition 65 Warning

**Warning:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. (California law requires this warning to be given to customers in the State of California).



## Specifications & Installation Instructions

# 18" OSCILLATING MISTING FAN

## MODEL 68025



## READ & SAVE THESE INSTRUCTIONS

### 18" Oscillating Misting Fan ASSEMBLY AND OPERATION INSTRUCTIONS

**CAUTION:**

Read and follow all instructions before operating fan. Do not use if any part is damaged or missing.

**WARNING:**

To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device. This fan has a 3-prong fused plug. To reduce the risk of electrical shock, this plug is intended to fit in an outlet only one way. If this does not fit the outlet, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature. Use your fan only with adequate wiring that is up to code. Connect to properly grounded outlets only.

**NOTE:** Installation of this equipment should be performed by a qualified person. We do not warrant any damage or injuries as a result of improper installation.

**This fan is suitable for indoor or outdoor use. Use only on properly grounded receptacles.**

**RULES FOR SAFE OPERATION:**

- Do not insert finger or any objects through the grill guard when fan is in operation.
- Disconnect power when moving from one location to another.
- Disconnect the power when removing guards for cleaning
- Do not use fan in window. Rain and moisture may create an electrical hazard.
- Make sure fan is mounted securely before operating.



**OPERATION and INSTALLATION INSTRUCTIONS:**

**TO ADJUST AIRFLOW UPWARD OR DOWNWARD:** Tilt the head of the fan to the desired angle.


**SPEED CONTROL:** Turn selector switch on electric motor to change the desired setting low, medium or high.

**FOR PERMANENT FAN MOUNTING ONLY:** Install fan onto solid vertical surface with appropriate 3/8" hardware through the large mounting hole in bracket. Additional bolts may be required depending on the mounting surface. Securely install the mounting bracket with heavy duty mounting bolts. Not supplied.

**CLEANING**

**WARNING:** Unplug from electrical supply source before cleaning. After servicing, any safety device (including grills and blades) must be reinstalled or remounted as previously installed. Use soft damp cloth then wipe with dry cloth. Do not use harmful cleaners. Do not bend the blades.

**Winter Shutdown:** Unplug power cord, shut off water supply, drain water from lines to prevent freeze damage.

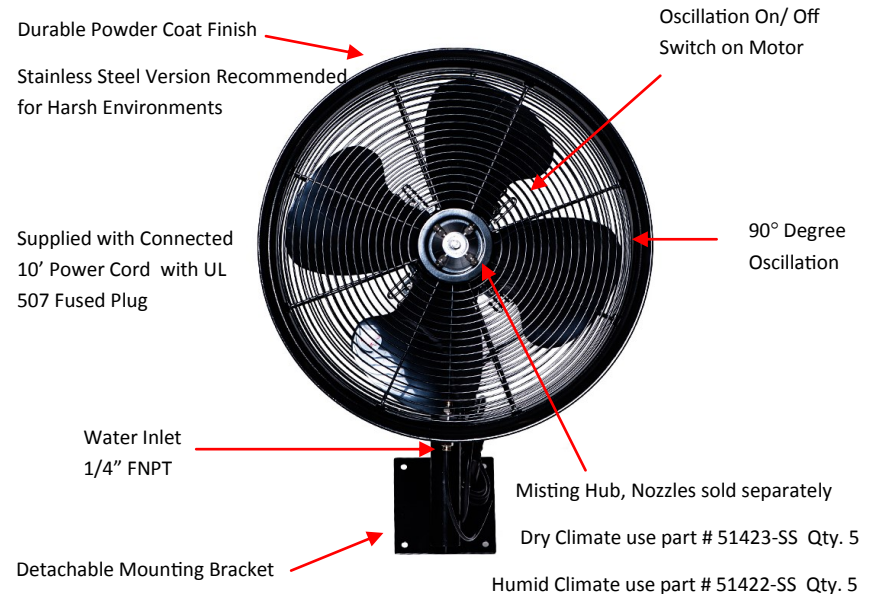

Model	Speed	Volts	Watts	RPM	Amps	Fan Size	Weight
68025	3	120	181	H 1550	1.5	18"	30 lbs.

If you should have any operation question, contact us at 623-444-5121