



HDE VARIABLE SPEED DIRECT DRIVE TOTALLY ENCLOSED FAN COOLED 600100-HDE-1PH-120 VFD

1000 PSI MISTING PUMP MANUAL

INCLUDING: SPECIFICATION DATA, GENERAL SAFETY PRECAUTIONS, OPERATION,
INSTALLATION , PARTS, MAINTENANCE & WARRANTY

QUALITY MISTING PUMPS

DIRECT DRIVE MISTING PUMP SPECIFICATIONS

PUMP	FLOW	MAXIMUM	MOTOR	SINGLE PHASE	MOTOR	MOTOR	NOISE	OIL	
MODELS	GPM	PRESSURE	HP	VOLTAGE	AMPS	RPM	Db(A)	CAPACITY	
601000-HDE-1PH-120VFD	1.0	1000	1.0	120	3.4	1725	62	8.5 oz.	

FEATURES

- CAT PUMP
- TEFC MOTOR
- VARIABLE SPEED
- INLET SOLENOID VALVE
- LIQUID FILLED PRESSURE GAUGE
- TOTALLY ENCLOSED with INTERNAL FAN
- ACOUSTICAL INSULATION ON INSIDE COVER FOR LOW NOISE LEVEL
- POWDER COAT FINISH
- ON/OFF SWITCH

TECHNICAL DATA

MAX. DISCHARGE PRESSURE	1000 PSI
ELECTRIC MOTOR TYPE	TEFC
MOTOR OVERLOAD	AUTOMATIC
DUAL FILTRATION	5 & 1 MICRON
INLET PSI RANGE	30-60 PSI
MAX LIQUID TEMPERATURE	145° F
WATER INLET VALVE	3/8" SOLENOID
PRESSURE GAUGE	0-2000 psi
SWITCH	ROTARY
6 FT. POWER CORD	SJTW-105C
OIL CAPACITY	8.5 oz

DIMENSIONS

31.5" L x 16.5" W x 13" H



WEIGHT

Approx. 100 lbs.



PUMP OVERVIEW

31064 1.0 HP TEFC ELECTRIC MOTOR 230 Volt

33055 RED CRANKCASE BREATHER CAP

57003 WATER INLET FILTER HOUSING

57011 5 MICRON CARTRIDGE

57006 1 MICRON CARTRIDGE

30375 INLET SOLENOID VALVE
30375-C SOLENOID CORD

30081 (120 Volt) EXHAUST FAN

92241

OIL SIGHT GAUGE

57251 PRESSURE

GAUGE

52623 COMP.NUT W/ SLEEVE (WATER OUTLET to MIST LINE)

44842 OIL DRAIN PLUG INSIDE HAND HOLE COVER



26038 (WATER INLET) HOSE 3/8" ID Per ft.

30102 ON / OFF SWITCH

Variable Speed Drive

66509 Pressure Transducer 4-20 ma 0-2000 PSI

30100 POWER CORD 12/3 120 Volt

PRESSURE REGULATOR is set at 1200 PSI. The pressure transducer is regulating the pressure at 1000 PSI

DO NOT ADJUST REGULATOR

QUALITY MISTING PUMPS



GENERAL SAFETY PRECAUTIONS

WARNING

CAN cause DEATH, SEVERE INJURY or substantial property damage.

↑ CAUTION

CAN cause MINOR INJURY or property damage.

GENERAL SAFETY PRECAUTIONS

Consequently, it is essential to comply with the instructions in this manual as well as local and national rules and safety regulations.

AWARNING HAZARDOUS VOLTAGE. Can cause serious injury or death. Disconnect power before servicing pump. Pump must be connected to a properly grounded circuit. Do not operate pump in wet conditions.

WARNING

MOVING PARTS. Pump may start automatically. Disconnect power, before servicing. Lockout/Tag out misting pump.

HOT SURFACES. Can cause serious injury. Do not touch. Allow to cool before servicing.

WARNING

HIGH PRESSURE WATER. Bypassing, modifying or removing safety/relief regulator valves can cause serious injury or death. Do not bypass, modify or remove safety/relief valves. If a leak should occur shut unit off before attempting to tighten any fittings or tube repairs. Do not change any pressure settings above maximum rating. Maximum pressure is 1000 PSI / 70 Bar

ACAUTION

RISK OF LEAKING or BURSTING. Use only suitable tubing and fittings acceptable for pressure of not less than the maximum allowable working pressure of the pump. Remove water from lines and filter bowls during winter months to prevent freezing damage to pump or tubing.

↑ CAUTION

Install pump in a suitable place to prevent property damage in the event a leak should occur.

AWARNING

Electrical installation and service should be performed by a qualified electrician who is familiar with all applicable local, state and federal laws and regulations.

GENERAL. The motor rating, as shown on the motor nameplate, and the power supply must have compatible voltage, phase and hertz characteristics.

WIRE SIZE. The electrical wiring between the power supply and electric motor varies according to motor horsepower and other factors. Install adequately sized power leads to protect against excessive voltage drop during start-up. Refer to the National Electric Code (NEC) for information on selecting the proper wire size and securing electrical connections. If you connect additional electrical equipment to the same circuit, consider the total electrical load when selecting the proper wire size

DO NOT UNDERSIZE WIRING. DO NOT USE EXTENSION CORDS.

OPERATION

The Advanced Misting SYstems 1000 PSI Pump takes ordinary city water pressure, which is normally about 50-70 PSI, and "boosts" it up to 1000 PSI. The higher water pressure created by the pump enhances mist cooling and heat absorption in two ways. First, it produces a higher flow of water through the nozzle. More water being expelled from the nozzle means more cooling. Second, it creates a smaller finer mist droplet that allows the droplet to evaporate more quickly. Better evaporation means better cooling.

There are many applications for the 1000 PSI Pump. Applications include patio cooling for homes and restaurants, greenhouses, humidification, dust control, odor control and many more.

Caution, Warning and Safety Instructions:

- 1. **Warning:** Before plugging in the unit for the first time, read the following section carefully. To reduce the risk of electric shock, plug in supplied grounded cord into a properly grounded receptacle. When servicing this unit, unplug power cord before attempting any service or repair.
- 2. Outdoor use ONLY! Not for indoor use.
- 3. Install pump in a suitable place to prevent property damage, in the event that a leak should occur.
- 4. Turn water off, and disconnect power to the unit when not in use for extended periods of time.
- 5. Do not place pump in damp or wet environments.
- 6. Feed system with potable cold water supply only. Do not connect pump to hot water supply.

Do not expose pump to freezing temperatures. When winterizing disconnect pump from power and water supply, and store in a dry safe place. Make sure all water is drained from the system to prevent damage in the event of a freeze.

INSTALLATION

- 1. Install pump above grade level on a pre-formed concrete pad (16" x 24"). This pump is non-submersible. Locate pump in a location where flooding and roof runoff does not occur to avoid water damage to the electric motor.
- 2. Verify water feed to pump location is potable cold water supply only.
- 3. Connect cold water feed to pump inlet and connect nylon tubing to pump outlet. <u>Important</u>: Install 50 ft. or more of nylon tubing from the pump to the metal line to prevent line noise and vibration.
- 4. Remove black shipping cap on the pump crankcase and install the red breather cap provided. Unit is pre-filled with oil and ready to operate. Oil should be half full on the sight glass when unit is off. Do not overfill.
- 5. Plug pump into a properly grounded receptacle. Do not use extension cords!
- 6. On new misting systems, flush lines before installing nozzles. The pump will not build pressure until all of the nozzles are installed.
- 7. Do not exceed 1000 PSI and do NOT run the pump without water.



MAINTENANCE & PARTS

Change oil every 500 hours of operation or once a year. Use approved pump oil (52025)

Proper oil level is half full on the sight gauge when the unit is off. Do not overfill. Oil capacity is 10.1 oz.

Change water filter cartridge annually or as needed. (57001) 5 Micron Cartridge.

Winter shutdown:

Unplug pump power cord, shut off water supply, remove filter bowl and drain water. Drain water out of all lines using compressed air to prevent freeze damage.

57011 5 MICRON FILTER CARTRIDGE

57006 1 MICRON FILTER CARTRIDGE



57251 PRESSURE GAUGE 0-2000 PSI



30102 ROTARY PANEL SWITCH 20 AMP



57025 CAT PUMP OIL 21 oz.



30375 SOLENOID VALVE 3/8"
30375-C CORD with DIN CONNECTOR



33053 SEAL KIT



66400K LOW WATER PRESSURE CUT-OUT SWITCH KIT (**Optional**: Protects pump from running dry)



47215 OIL SEAL (3 required)



30215-CAT THERMAL PROTECTOR (**Optional**: Protects pump from overheating from excessive bypass)



33058 VALVE KIT



52000-K Drain Valve Kit (**Optional:** Installs at low point to nylon tubing)






PUMP PARTS





EXPLODED VIEW

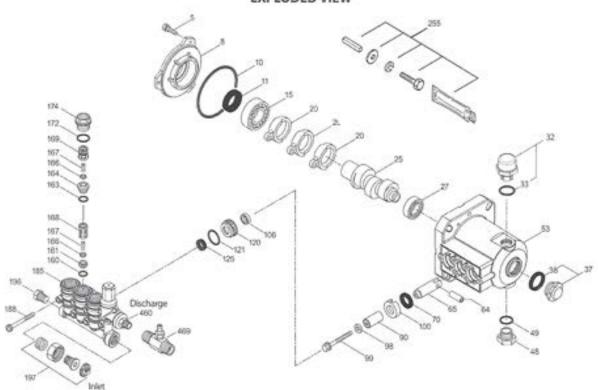

PARTS LIST

ITEM	P/N	MATL	DESCRIPTION	QTY	ITEM	P/N	MATL	DESCRIPTION	QTY
5	549360	STOP R	Screw, HH (M6x14)	3	100	46233	D	Retainer, Seal	WITT .
8	547153	AL	Cover, Bearing	- 1	106	†48222			- 3
10	14041	NBR			120		NBR BB	Seal, LPS w/S-Spq - 85D	- 3
10			O-Ring, Bearing Cover - 700	1		547357		Case, Seal	3
11	55337	NBR.	Seal, Oil		121	13976	MBR	O-Ring, Seal Case - 70D	- 3
15	14488	STL	Bearing, Ball - Inner	- 1	325	46240	MBR	Seal HPS w/S	- 3
20	547048	TNM	Rod, Connecting	- 1	160	13965	NBR.	O-Ring, Seat, Inlet-70D	
25	132183	CM	Crankshaft, 3450 RPM, 5/8", 2.0 mm, 4DX10ER	- 1	161	545177	5	Seat, Inlet	- 3
	132185	CM	Crankshaft, 3450 RPM, 5/8*, 3.0 mm, 4DX15ER		163	19285	NBR	O-Ring, Seat, Discharge - 70D	- 3
	132186	CM.	Crankshaft, 3450 RPM, 5/8", 4,0 mm, 4DX20ER	1	164	545178	5	Seat, Discharge	3
	132187	CM	Crankshaft, 3450 RPM, S/8", 5.6 mm, 4DX27ER	1	166	46764	5	Valve	- 6
	132188	CM	Crankshaft, 3450 RPM, 5/8", 6.2 mm, 4DX30ER	1	167	46865	5	Spring	6
27	15710	STL.	Bearing, Ball - Outer	1	168	543988	PVDF	Retainer, Spring, Inlet	3
32	549726	-	Cap, Vented w/O-Ring (Rain Cap)	1	169	49764	PVDF	Retainer, Spring, Discharge	3
33	14179	NBR:	O-Ring, Oil Filter Cap - 700	1	172	142807	NBR	O-Ring, Plug - 900	3
33 37	92241	-	Gauge, Bubble Oil w/Gasket	1	174	547104	88	Plug, Valve (M20x1.5)	3
38	44428	NBR.	Gasket, Flat Flex, Oil Gauge - 800	1	185	132192	FBB	Head, Manifold w/integral Regulatos/Unloader Body	1
48.	44842	NY	Plug, Orain	1	188	549357	STCPR	Screw, HSH (M6x60)	6
49	14179	NBR	O-Ring, Drain Plug - 70D	1	196	22177	88CP	Plug Accessory	1
53	49801	AL	Crankçase	- 1	197	941536	88	ASSY, GH, 3/8" NPT/F)	- 1
64	46229	CM	Pin, Crosshead	3	255	30516	STZPR	Assy, Bolt Mount	1
65	132190	88	Rod, Plunger	3	300	33053	MBR	Kit, Seal (Inclus: 98, 106, 121, 125)	1
70	47215	NBR	Seal, Oil - 700	3	310	76978	NBR	Kit, Valve (Inclds:160, 161, 163, 164, 166, 167, 168, 169, 172)	17
90	542403	CC	Plunger (M16x27)	3	400	-		Regulator/Unloader, Integral (See Individual Parts)	1
98	46730	NBR	Washer, Seal - 90D	3	460	107681	88	Fitting, Discharge	1
99	542405	5	Retainer, Plunger (Mtix35)	3	459	7237	88	Injector, Chemical, Fixed	1

Bold part numbers are unique to a particular pump model. Italics are optional items.

[] Date of latest production change. R Components compty with RoHS Directive. + Production parts are different than repair parts.

See Tech Bulletins 002, 024, 036, 043, 055, 074, 063, 066 and 094 for additional information.

MATERIAL CODES (Not Part of Part Number): AL-Alaminum 88-Brass 88CP-Brass Chrome Plated CC-Ceramic CM-Chrome-moly D-Acetal F88-Forged Brass NBR-Medium Ntrille (Buna-N): NY-Nylon: PVDF-Polyvirylidene Fluoride 5-30455 STL-Steel STCP-Steel/Chrome Plated STZP-Steel/Clinc Plated TNM-Special High Strength NOTE: Discard Key which may come standard with most motors and use only the key included in this kit.

WARRANTY

Warranty and Statement

Advanced Misting Systems, Inc. warrants to its customers that Advanced Misting Systems products, excluding nozzles, to be free of defects in materials and workmanship for a period of (1) year from the date of purchase to the original purchaser. With customers proof of receipt Advanced Misting Systems, Inc. will fix or replace the defective part or parts. Advanced Misting Systems, Inc. reserves the right to inspect the defective part or parts prior to replacement. Advanced Misting Systems, Inc. will not be responsible for consequential or incidental cost or damage caused by the product failure. Advanced Misting Systems, Inc., liability under this warranty is limited solely to the replace-ment or repair of defective parts.

Neither this warrant nor any implied warranty applies to damage or harm caused by any or all of the following:

- 1. Freight Damage
- 2. Damage cause from freezing, fire, natural disaster, improper installation, chemicals, unusual characteristics of water supply.
- 3. Damage caused by parts, accessories, or components not obtained from or approved by Advanced Misting Systems, Inc.
- 4. Damage due to misapplication and/or misuse.
- 5. Normal wear of moving parts or components affected by moving parts
- 6. Use with flammable materials is forbidden.

The liability of Advanced Misting Systems, Inc. under the foregoing warranty is limited to the repair or replacement at the discretion of Advanced Misting Systems, Inc. The return of the entire pump or other product to Advanced Misting Systems Inc. factory must be within the warranty period, at the sole expense of the purchaser. Upon examination the returned product will be deemed to have been defective in material or workmanship.

Advanced Misting Systems, INC., expressly warrants its pumps and other products as above stated. There are no other express warranties Any implied warranties including implied warranty of merchantability or of fitness for a particular purpose are limited in duration to one year from the date of purchase by the original purchaser except in states that do not allow time limitations on implied warranties. There is no implied warranty of fitness for a particular purpose or merchantability when this product is put to an industrial, commercial or rental use.

No person including any dealer or representative of Advanced Misting Systems, Inc. is authorized to make any representation or warranty concerning Advanced Misting Systems, Inc. products on behalf of Advanced Misting Systems, Inc. or to assume for Advanced Misting Systems, Inc. the obligations contained in the warranty. Advanced Misting Systems, Inc. reserves the right to install the same upon its existing products or products then in process or manufacture. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Advanced Misting Systems

216 Avenida Fabricante Suite 207 San Clemente, CA 92672 (760) 779-1352

Www.advancedmistingsystems.com